

Accessories

Chimera manufactures a complete line of lighting modifiers and accessories. Our full line catalog may also be viewed on: www.chimeralighting.com or e-mail questions to: salesinfo@chimeralighting.com

- Speed Rings
- Stand Adapters
- Scrim
- Soft Eggcrate Fabric Grids
- Honeycomb Grids
- Barn Doors

Other Chimera Lighting Products



OCTAPLUS



LANTERNS

COLLAPSIBLE
BEAUTY DISH




F2X



LIGHTBANKS

Instructions for Care and Use

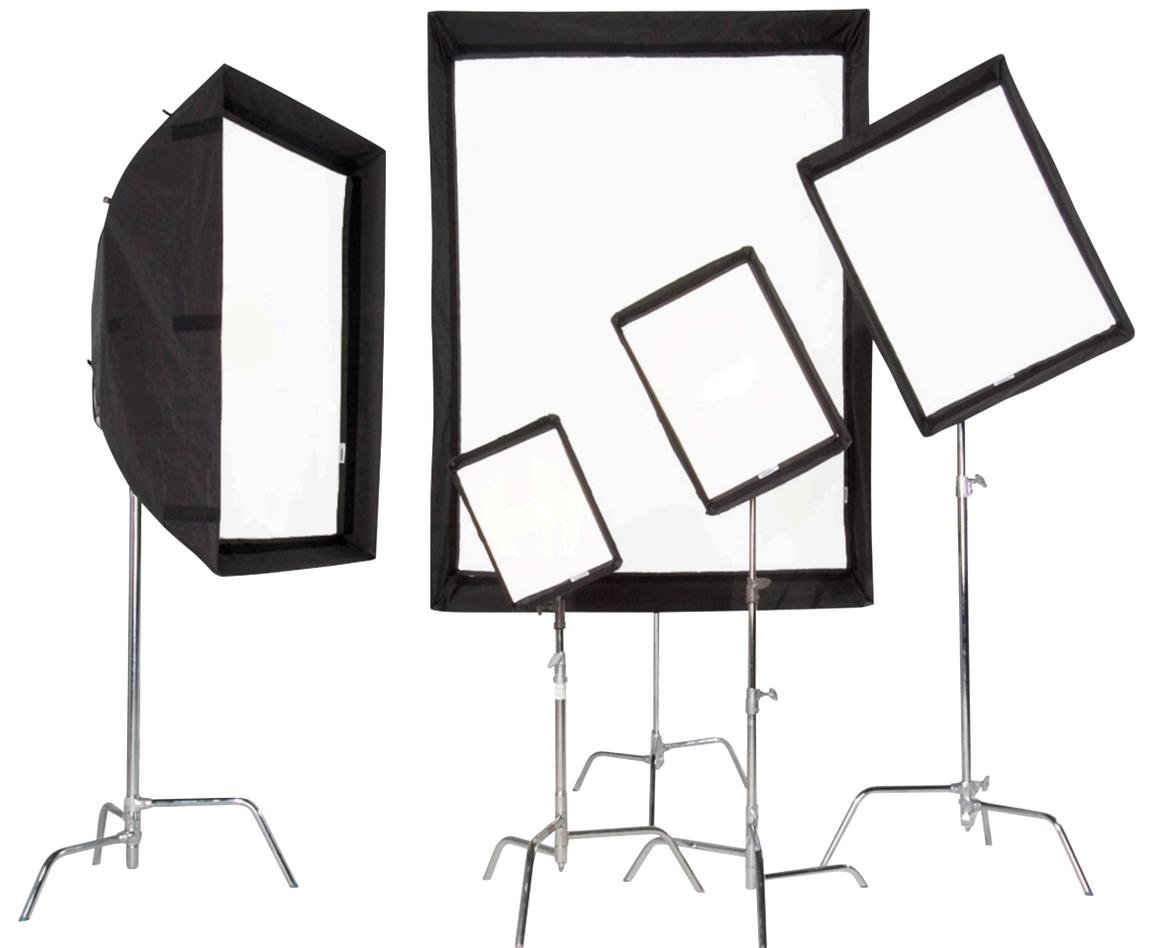

Instructions For Lightbank Assembly And Care

1. Insert Poles into Sleeves



Keep the pole sleeve straight as you slide each pole through the sleeve to the end of each Lightbank corner.



2. Mount the Lightbank on Speed Ring - Insert the poles completely, into the holes at the corners of the Speed Ring one at a time, starting at the top. Make sure the poles are fully inserted into the holes.



It may seem like you'll bend the pole to breaking, but you won't.



Grip the pole diagonally opposite from the pole you are inserting to provide extra leverage.



When using our patented Chimera Quick Release Ring, release the last mounting block for easy insertion of the final pole. Then simply pull the last pole back to snap into final position.



3. Insert the Optional Diffusion Baffle Inside the Lightbank - With Chimera label facing the front of the Lightbank, attach the diffusion baffle to the Velcro tabs located next to the pole sleeves inside the Lightbank.



4. Installing Removable Front Screen - With the Chimera label facing the front of the Lightbank, attach the screen to the Lightbank.



For easier installation, align the back edge of the Velcro strip on the Lightbank and work your way around the perimeter.



The front half of the Light-bank's wide Velcro strip should be visible in the Lightbank's recess, making it ready to accept accessories.



5. Cooling - Provide adequate ventilation for your equipment!

- Use the lighting instrument's internal cooling fan if available.
- When using continuous light sources, keep the top flap open as much as possible.
- Use upper and lower vents to cool Quartz and Daylight Banks.
- Always allow the light source to cool before disassembling and placing in storage.

6. Removing the Lightbank from the Speed Ring - follow the steps above in reverse order.



When using a Chimera Quick Release Ring, simply release the locking levers to release the pole tension and then slide the poles from the mounting holes.

7. Folding and Storage - Leave the poles in the Lightbank if desired. It is optional to remove the optional diffusion baffle and the front screen. Crease the short sides of the Lightbank and flatten. Fold the Lightbank in half once, then roll up and place it into the storage sack. Always make sure that your Lightbank is clean and completely dry before storing.



Lightbank Care

Cleaning - Your Chimera Lightbank can be cleaned by hand washing with cold water, a sponge and mild soap. Do not machine wash. To dry, assemble the Lightbank onto a Speed Ring and completely air dry.

Repair - Chimera has an expert in-house repair department. Lightbanks need to be clean, with any added tape removed before sending in for repair. If the Lightbank is received in dirty or in taped condition, the repair may be refused and returned to the sender. Please call in advance to get a Return Authorization Number and repair estimate at 888-444-1812.

Chimera 5-Year Promise

At Chimera, we stand behind our Lightbanks, speed rings, and light control accessories with a limited 5-year warranty against manufacturing defects in materials, workmanship, and color stability. If our products are not fully operational out of the box or if they fail to perform within five years from the date of purchase, return it for repair or replacement at no charge. Of course, Chimera's warranty cannot cover damage caused by accidents, improper care or use, or the natural deterioration of materials over an extended period of time. This warranty does not apply to expendables, such as light bulbs, and certain OEM products.