

Instructions For Assembling the Frame:

1. Remove Panel Frame from storage bag. Lay flat on floor and spread open the aluminum frame.

2. Begin at a corner by connecting the tube end with the corner, making sure to align the pegs into the notches. The elastic cord will guide the tube and corner together, as shown in photo #2.

 **Tip!** Make sure that the notch goes into the peg for a secure snug fit.



 **Tip!** Be careful not to bend the ends as too much pressure can break the notch.

3. Continue around the frame connecting the tube ends to ferrules, making sure to align pegs into the notches as shown in photo #3.

4. With the corners of the panel frame all connected, you will have a solid frame. The panel frame will now appear as shown in photo #4.

5. To attach your panel frame fabric pull elastic banding on corners of fabric around the corners of your panel frame as shown in photo #5.

 **Tip!** If you're raising the frame up secure the angle by placing the peg in the grip head (not included) adapter notch as shown in photo #6.

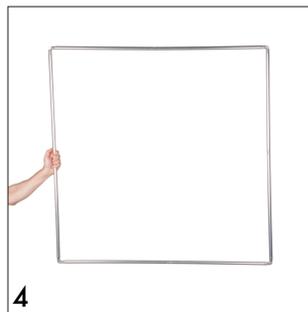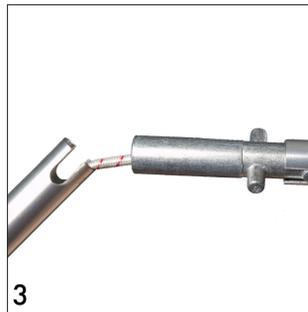

Create a V-Flat from Two Frames:

- 1. Assemble two frames**
- 2. Place both frames side by side.**
- 3. Slide top of adapter to both panel frames and then snap other bottom half of the adapter to secure the frames together. You can now swivel the frames to a V shape to have them stand independently of a C-stand.**



Disassembling the Frame

- 1. Pull the elastic fabric over and away from the frame on first corner and move around the frame. Pull the first corner peg out and slide the pole out of its hole. Repeat on the remaining poles. After all the remaining poles are removed, the center poles should come out very easily and be held together by the shock cord.**

Panel Frame Care

Cleaning - Your Chimera Panel Frame fabric can be cleaned by hand washing with cold water, a sponge and mild soap. Do not machine wash. To dry, assemble the fabric onto a Panel Frame and completely air dry.

Repair - Chimera has an expert in-house repair department. Panel Frame fabric need to be clean, with any added tape removed before sending in for repair. If the Panel Frame fabric is received in dirty or in taped condition, the repair may be refused and returned to the sender. Please call in advance to get a Return Authorization Number and repair estimate at 888-444-1812.

Chimera 5-Year Promise

At Chimera, we stand behind our Panel Frame fabric, Lightbanks, Speed Rings, and light control accessories with a limited 5-year warranty against manufacturing defects in materials, workmanship, and color stability. If our products are not fully operational out of the box or if they fail to perform within five years from the date of purchase, return it for repair or replacement at no charge. Of course, Chimera's warranty cannot cover damage caused by accidents, improper care or use, or the natural deterioration of materials over an extended period of time. This warranty does not apply to expendables, such as light bulbs, and certain OEM products.

OTHER PANEL FRAME ACCESORIES

Black Silver



Black White



White Zebra



#5090
Panel Frame Connectors
(set of 3)



PANEL FRAMES

Instructions for Care and Use

Durable aluminum construction with internal elastic cable for easy assembly



PANEL ACCESSORIES AND PARTS

Description	Micro 24"x24" 61 X 61 cm Folds to 24"	42"x42" 107 X 107cm Folds to 42" (5010 compacts to 23")	48"x48" 122 X 122cm Folds to 28"	42"x72" 107 X 183cm Folds to 42"	48"x72" 122 x 183cm Folds to 38"	72"x72" 183 X 183cm Folds to 38"
Frame	5040	5000	5050	5020	5080	5030
Frame (Compact)		5010				
Chimera Cloth (1.4 f/stop)	5171	5141	5200	5151	5250	5161
1/2 Grid Cloth (1 f/stop)	5172	5142	5205	5152	5255	5162
1/4 Grid Cloth (.5 f/stop)	5173	5143	5210	5153	5260	5163
White/Black	5174	5144	5215	5154	5265	5164
Silver Gold Zebra / Soft White	5175	5145	5220	5155	5270	5165
Silver/Black	5176	5146	5221	5156	5275	5166
Single Scrim (.5 f/stops)		5148	5225	5158	5280	5168
Double Scrim (1 f/stop)		5149	5230	5159	5285	5169