

WARRANTY INFORMATION

At Chimera, we stand behind our Lightbanks, Speed Rings, and light control accessories with a limited 5-year warranty against manufacturing defects in materials, workmanship, and color stability. If our products are not fully operational out of the box or if they fail to perform within five years from the date of purchase, return for repair or replacement at no charge. Of course, Chimera's warranty cannot cover damage caused by accidents, improper care or use, or the natural deterioration of materials over an extended period of time. This warranty does not apply to expendables, such as light bulbs, and certain OEM products.

TIPS FOR CARE AND USE

Cleaning - Your Chimera Lightbank can be cleaned by hand washing with cold water, a sponge and mild soap. Do not machine wash. To dry, assemble the Lightbank onto a Speed Ring and completely air dry.

Repair - Chimera has an expert in-house repair department. Lightbanks need to be clean, with any added tape removed before sending in for repair. If the Lightbank is received in dirty or in taped condition, the repair may be refused and returned to the sender. Please call in advance to get a Return Authorization Number and repair estimate at +1.888.444.1812 or +1.303.444.8000.

RECOMMENDED BEST PRACTICES FOR CLEANING AND DISINFECTING CHIMERA LIGHTBANKS & TEXTILES



DO NOT USE HARSH CLEANERS LIKE BLEACH OR OTHER CHLORINATED PRODUCTS ON ANY TEXTILE FROM CHIMERA

DO NOT MACHINE WASH OR DRY ANY TEXTILE FROM CHIMERA

Fabric Diffusions:

All diffusions should only be cleaned and disinfected by hand. **DO NOT MACHINE WASH OR DRY!** Use mild soap (something like Dawn) and hand wash thoroughly in warm water. Air dry.

Lightbanks and Items with Laminated Textiles i.e., Black + Reflection:

Thoroughly wet a clean cloth using a solution of warm water with mild soap. Wipe each surface completely with the soap solution and then repeat with a clean, wet cloth to rinse. Air dry. Alcohol-based aerosol spray with at least 70% alcohol can be effective for both sides of the textiles. Spray evenly to coat all surfaces, use a clean cloth to reach hard to spray areas. Air dry.

Lighttools Fabric Grids:

Thoroughly wet a clean cloth using a solution of warm water with mild soap. Wipe each surface completely with the soap solution and then repeat with a clean, wet cloth to rinse. Air dry. Alcohol-based aerosol spray with at least 70% alcohol can be effective for both sides of the textiles. Spray evenly to coat all surfaces, use a clean cloth to reach hard to spray areas. Air dry.

Rings & Frames:

Wipe all surfaces clean with at least 70% alcohol solution and allow to air dry.

16189800



INSTRUCTIONS FOR CARE AND USE

1618

POP BANK FOR APUTURE P300c



CHIMERA LIGHTING • 1067 TELLEEN AVE. ERIE, CO 80516 • (303) 444-8000
WWW.CHIMERALIGHTING.COM • INFO@CHIMERALIGHTING.COM

ASSEMBLY

1



Remove the POP Bank from its storage sack and unfold until it takes a rectangular shape. You should hear a POP! when the sides are straightened. Pull the POP Bank over the front face of the Nova P300c, taking care to observe the 'This Side Up' label is placed on the upper/top side of the POP Bank.

2



Pull the POP Bank over the front face of the fixture. The POP Bank should sit just over the lip of the fixture.

3



Be sure the web straps on each corner are pulled close to the front of the fixture face as shown in the image

4



Run the attached hook-and-loop straps through the D-ring on the bottom of the POP Bank. Tighten until they sit flat against the rear of the fixture.

5



Attach the supplied front diffusion screen and your POP Bank is ready for use!



Want more control?
Use our 3664ez 40 degree Soft
Egg Crate for best fit!



FAILURE TO FOLLOW THESE SAFETY PRECAUTIONS COULD
CREATE A HAZARDOUS CONDITION

- » This product is NOT intended for household use.
- » Do not leave unattended.
- » Use in a moderate temperature environment.
- » Open the flaps for ventilation as required.
- » Maximum lamp rating for this product is 2,000 watts.

DISASSEMBLY AND STORAGE

Remove the POP Bank from the fixture by following the assembly instructions in reverse. Refold by pushing the middle of each short side inwards, flattening, then folding the entire POP Bank in half.

