



2814 Speedlight Pro Kit for Profoto A1 & Godox V1

Instructions for Care and Use



Parts & Accessories Table

Description	Item	Description	Item
Shoe Mount Adapter	2630	Inner Baffle	4300
Pole	4000	Dual Axis Stand Adapter	38651000
Storage Sack	4511	30 degree EZ POP Soft Egg Crate	3503EZ
Full Chimera Cloth Front Screen	4100	40 degree EZ POP Soft Egg Crate	3500EZ
1/2 Grid Front Screen	4102	50 degree EZ POP Soft Egg Crate	3505EZ
1/4 Grid Front Screen	4104		

Assembly

1. Attach ring & shoe to bracket using the two plastic handled thumb screws. **Note: the star handle screws into the shoe and the round handle screws into the ring.**



2. Connect the two brass baby pins and screw into the thumb screw on the ring.



3. Construct the Lightbank by inserting the poles into the bank and inserting the ends into the ring. Once the Lightbank is fully erect, attach the diffusion front screen.



4. Use the 2 Axis Stand Adapter to attach the entire assembly to a light stand and focus.

5. Attach your Speedlight to the shoe and shoot.



Disassembly and Storage

Disassemble in reverse order of assembly. The Lightbank poles and/or front screen can be left in/on the Lightbank and rolled prior to placing in its storage sack.

Tips for Care and Use

Cleaning - Your Chimera Lightbank can be cleaned by hand washing with cold water, a sponge and mild soap. Do not machine wash. To dry, assemble the Lightbank onto a Speed Ring and completely air dry.

Repair - Chimera has an expert in-house repair department. Lightbanks need to be clean, with any added tape removed before sending in for repair. If the Lightbank is received in dirty or in taped condition, the repair may be refused and returned to the sender. Please call in advance to get a Return Authorization Number and repair estimate at 888-444 1812.

At Chimera, we stand behind our Lightbanks, speed rings, and light control accessories with a limited 5-year warranty against manufacturing defects in materials, workmanship, and color stability. If our products are not fully operational out of the box or if they fail to perform within five years from the date of purchase, return it for repair or replacement at no charge. Of course, Chimera's warranty cannot cover damage caused by accidents, extended period of time. This warranty does not apply to expendables, such as light bulbs, and certain OEM products.