

WARRANTY INFORMATION

At Chimera, we stand behind our Lightbanks, Speed Rings, and light control accessories with a limited 5-year warranty against manufacturing defects in materials, workmanship, and color stability. If our products are not fully operational out of the box or if they fail to perform within five years from the date of purchase, return for repair or replacement at no charge. Of course, Chimera's warranty cannot cover damage caused by accidents, improper care or use, or the natural deterioration of materials over an extended period of time. This warranty does not apply to expendables, such as light bulbs, and certain OEM products.

TIPS FOR CARE AND USE

Cleaning - Your Chimera Lightbank can be cleaned by hand washing with cold water, a sponge and mild soap. Do not machine wash. To dry, assemble the Lightbank onto a Speed Ring and completely air dry.

Repair - Chimera has an expert in-house repair department. Lightbanks need to be clean, with any added tape removed before sending in for repair. If the Lightbank is received in dirty or in taped condition, the repair may be refused and returned to the sender. Please call in advance to get a Return Authorization Number and repair estimate at +1.888.444.1812 or +1.303.444.8000.

RECOMMENDED BEST PRACTICES FOR CLEANING AND DISINFECTING CHIMERA LIGHTBANKS & TEXTILES



DO NOT USE HARSH CLEANERS LIKE BLEACH OR OTHER CHLORINATED PRODUCTS ON ANY TEXTILE FROM CHIMERA

DO NOT MACHINE WASH OR DRY ANY TEXTILE FROM CHIMERA

Fabric Diffusions:

All diffusions should only be cleaned and disinfected by hand. **DO NOT MACHINE WASH OR DRY!** Use mild soap (something like Dawn) and hand wash thoroughly in warm water. Air dry.

Lightbanks and Items with Laminated Textiles i.e., Black + Reflection:

Thoroughly wet a clean cloth using a solution of warm water with mild soap. Wipe each surface completely with the soap solution and then repeat with a clean, wet cloth to rinse. Air dry. Alcohol-based aerosol spray with at least 70% alcohol can be effective for both sides of the textiles. Spray evenly to coat all surfaces, use a clean cloth to reach hard to spray areas. Air dry.

Lighttools Fabric Grids:

Thoroughly wet a clean cloth using a solution of warm water with mild soap. Wipe each surface completely with the soap solution and then repeat with a clean, wet cloth to rinse. Air dry. Alcohol-based aerosol spray with at least 70% alcohol can be effective for both sides of the textiles. Spray evenly to coat all surfaces, use a clean cloth to reach hard to spray areas. Air dry.

Rings & Frames:

Wipe all surfaces clean with at least 70% alcohol solution and allow to air dry.

18279800



INSTRUCTIONS FOR CARE AND USE

1827

 
LANTERN w/ SKIRT KIT FOR 1 x 2 PANEL STYLE LED FIXTURES



CHIMERA LIGHTING • 1067 TELLEEN AVE. ERIE, CO 80516 • (303) 444-8000
WWW.CHIMERALIGHTING.COM • INFO@CHIMERALIGHTING.COM


ASSEMBLY

1

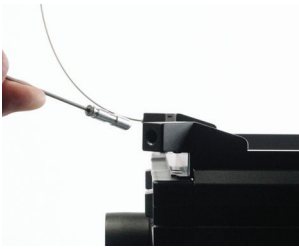

Remove the Lantern body from the storage sack and unfold. Attach frame to fixture. Place pole ends into corresponding holes in frame.

 2

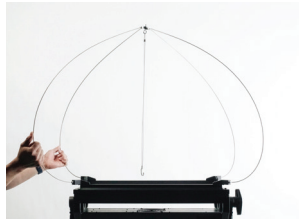


It may seem like you'll bend the pole to breaking but you won't. Grip the pole diagonally opposite from the pole you are inserting to provide extra leverage. Make sure to align the short side of the fixture with the short side of the lantern.

3



While pushing downward on the center of the lantern, bring the internal cables down and place hooked ends in the grooves in the pole ferrules on opposite corners of the fixture.

 4

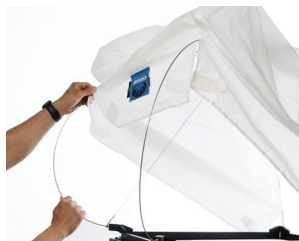

With the corners of the lantern body aligned with the poles, gradually pull one corner of the body up along the pole as far as it will go. Then move to another corner and do the same. Repeat with each corner.

5



Be sure to align poles with seams in the body. Connect hook and loop tabs of the Lantern body for a good fit. Once completed, your lantern should appear like the image on the front page.

6



Optional: Attach skirt using the hook-and-loop. Start with one skirt corner and work your way around the perimeter of the Lantern for an even and level installation.



WARNING

FAILURE TO FOLLOW THESE SAFETY PRECAUTIONS COULD CREATE A HAZARDOUS CONDITION

- » This product is NOT intended for household use.
- » Do not leave unattended.
- » Use in a moderate temperature environment.
- » Open the flaps for ventilation as required.
- » Maximum lamp rating for this product is 2,000 watts.

DISASSEMBLY AND STORAGE

Disassemble and repack the Soft Lantern with Skirt Kit by following the assembly instructions in reverse.