

## WARRANTY INFORMATION

At Chimera, we stand behind our Lightbanks, Speed Rings, and light control accessories with a limited 5-year warranty against manufacturing defects in materials, workmanship, and color stability. If our products are not fully operational out of the box or if they fail to perform within five years from the date of purchase, return for repair or replacement at no charge. Of course, Chimera's warranty cannot cover damage caused by accidents, improper care or use, or the natural deterioration of materials over an extended period of time. This warranty does not apply to expendables, such as light bulbs, and certain OEM products.

## TIPS FOR CARE AND USE

**Cleaning** - Your Chimera Lightbank can be cleaned by hand washing with cold water, a sponge and mild soap. Do not machine wash. To dry, assemble the Lightbank onto a Speed Ring and completely air dry.

**Repair** - Chimera has an expert in-house repair department. Lightbanks need to be clean, with any added tape removed before sending in for repair. If the Lightbank is received in dirty or in taped condition, the repair may be refused and returned to the sender. Please call in advance to get a Return Authorization Number and repair estimate at +1.888.444.1812 or +1.303.444.8000.

## RECOMMENDED BEST PRACTICES FOR CLEANING AND DISINFECTING CHIMERA LIGHTBANKS & TEXTILES



**DO NOT USE HARSH CLEANERS LIKE BLEACH OR OTHER CHLORINATED PRODUCTS ON ANY TEXTILE FROM CHIMERA**

**DO NOT MACHINE WASH OR DRY ANY TEXTILE FROM CHIMERA**

### **Fabric Diffusions:**

All diffusions should only be cleaned and disinfected by hand. DO NOT MACHINE WASH OR DRY! Use mild soap (something like Dawn) and hand wash thoroughly in warm water. Air dry.

### **Lightbanks and Items with Laminated Textiles i.e., Black + Reflection:**

Thoroughly wet a clean cloth using a solution of warm water with mild soap. Wipe each surface completely with the soap solution and then repeat with a clean, wet cloth to rinse. Air dry. Alcohol-based aerosol spray with at least 70% alcohol can be effective for both sides of the textiles. Spray evenly to coat all surfaces, use a clean cloth to reach hard to spray areas. Air dry.

### **Lighttools Fabric Grids:**

Thoroughly wet a clean cloth using a solution of warm water with mild soap. Wipe each surface completely with the soap solution and then repeat with a clean, wet cloth to rinse. Air dry. Alcohol-based aerosol spray with at least 70% alcohol can be effective for both sides of the textiles. Spray evenly to coat all surfaces, use a clean cloth to reach hard to spray areas. Air dry.

### **Rings & Frames:**

Wipe all surfaces clean with at least 70% alcohol solution and allow to air dry.



## INSTRUCTIONS FOR CARE AND USE

1667

## MEDIUM LIGHTBANK WITH POLES FOR 1 x 2 LED PANELS



CHIMERA LIGHTING • 1067 TELLEEN AVE. ERIE, CO 80516 • (303) 444-8000  
WWW.CHIMERALIGHTING.COM • INFO@CHIMERALIGHTING.COM

## ASSEMBLY

1



Insert Poles into sleeves. Keep the pole sleeve straight as you slide each pole through the sleeve to the end of each corner.

2



Insert poles completely into holes at the corners of the mounting frame one at a time, starting at the top. It may seem like you'll bend the pole to breaking, but you won't. Grip the pole diagonally opposite from the pole you are inserting to provide extra leverage.

3



*OPTIONAL:* Insert the diffusion baffle inside the Lightbank: Attach the diffusion baffle to the white loop tabs located next to the pole sleeves with the Chimera label facing the front of the Lightbank.

4



Installing removable front screen: With the Chimera label facing the front of the Lightbank, attach the screen. For easier installation, align the hook strip with the back edge of the wide loop strip on the Lightbank and work your way around the perimeter.



Your Medium Lightbank is set up and ready for use!

This lightbox is compatible with a variety of fixture brands. Your fixture may look different than the one pictured here.

Chimera recommends 3530 or 3530ez 40 degree Soft Egg Crates to reduce spill. Other cut-offs available, consult factory.



### WARNING

FAILURE TO FOLLOW THESE SAFETY PRECAUTIONS COULD CREATE A HAZARDOUS CONDITION

- » This product is **NOT** intended for household use.
- » Do not leave unattended.
- » Use in a moderate temperature environment.
- » Open the Lightbank's flaps for ventilation as required.
- » This product is intended for use with LED lights **ONLY**.

### DISASSEMBLY AND STORAGE

Removing the Lightbank from the Speed Ring - follow the steps above in reverse order. When using a Chimera Quick Release Ring, simply release the locking levers to release the pole tension and then slide the poles from the mounting holes.

Leave the poles in the Lightbank if desired. It is optional to remove the optional diffusion baffle and the front screen. Crease the short sides of the Lightbank and flatten. Fold the Lightbank in half once, then roll up and place it into the storage sack. Always make sure that your Lightbank is clean and completely dry before storing.