### WARRANTY INFORMATION

At Chimera, we stand behind our Lightbanks, Speed Rings, and light control accessories with a limited 5-year warranty against manufacturing defects in materials, workmanship, and color stability. If our products are not fully operational out of the box or if they fail to perform within five years from the date of purchase, return for repair or replacement at no charge. Of course, Chimera's warranty cannot cover damage caused by accidents, improper care or use, or the natural deterioration of materials over an extended period of time. This warranty does not apply to expendables, such as light bulbs, and certain OEM products.

### **TIPS FOR CARE AND USE**

<u>Cleaning</u> - Your Chimera Lightbank can be cleaned by hand washing with cold water, a sponge and mild soap. Do not machine wash. To dry, assemble the Lightbank onto a Speed Ring and completely air dry.

**<u>Repair</u>** - Chimera has an expert in-house repair department. Lightbanks need to be clean, with any added tape removed before sending in for repair. If the Lightbank is received in dirty or in taped condition, the repair may be refused and returned to the sender. Please call in advance to get a Return Authorization Number and repair estimate at +1.888.444.1812 or +1.303.444.8000.

# RECOMMENDED BEST PRACTICES FOR CLEANING AND DISINFECTING CHIMERA LIGHTBANKS & TEXTILES

DO NOT USE HARSH CLEANERS LIKE BLEACH OR OTHER CHLORINATED PRODUCTS ON ANY TEXTILE FROM CHIMERA

DO NOT MACHINE WASH OR DRY ANY TEXTILE FROM CHIMERA

#### Fabric Diffusions:

All diffusions should only be cleaned and disinfected by hand. DO NOT MACHINE WASH OR DRY! Use mild soap (something like Dawn) and hand wash thoroughly in warm water. Air dry. Lightbanks and Items with Laminated Textiles i.e., Black + Reflection:

Thoroughly wet a clean cloth using a solution of warm water with mild soap. Wipe each surface completely with the soap solution and then repeat with a clean, wet cloth to rinse. Air dry. Alcohol-based aerosol spray with at least 70% alcohol can be effective for both sides of the tex-tiles. Spray evenly to coat all surfaces, use a clean cloth to reach hard to spray areas. Air dry. **Lighttools Fabric Grids:** 

Thoroughly wet a clean cloth using a solution of warm water with mild soap. Wipe each surface completely with the soap solution and then repeat with a clean, wet cloth to rinse. Air dry. Alcohol-based aerosol spray with at least 70% alcohol can be effective for both sides of the tex-tiles. Spray evenly to coat all surfaces, use a clean cloth to reach hard to spray areas. Air dry. **Rings & Frames:** 

Wipe all surfaces clean with at least 70% alcohol solution and allow to air dry.



## INSTRUCTIONS FOR CARE AND USE

6020 6025 **2' OCTA LIGHTBANK** 



6020 Low Heat shown here

### Your 2' Octa is now set up and ready to use!

### **ASSEMBLY**



Insert poles into the pole sleeves on the Octa Lightbank. Ensure that the shorter smooth ferrules are inserted into the Lightbank. The longer, notched ferrules should be exposed.



Insert poles into the pole holes on the Chimera Speed Ring. Note that the tension on the Lightbank will become greater after inserting each pole. It may feel like you will break a pole, but you will not!

PRO TIP: Insert poles on opposite sides from each other.



Once the Octa is assembled on the Speed Ring, attach to the fixture.



With the Lightbank on the fixture attach the internal baffle to the white hook and loop tabs on the inside of the Lightbank.



Attach Chimera Cloth front screen to the hook and loop on the front of the Lightbank.



6025 High Heat shown here.

Open vents for proper cooling.



\*\*\*\*NOTE: Eight attachment points for a safety bond are located on the outside of the Lightbank body, as highlighted in this picture.



FAILURE TO FOLLOW THESE SAFETY PRECAUTIONS COULD CREATE A HAZARDOUS CONDITION

- » This product is NOT intended for household use.
- » Do not leave unattended
- » Use in a moderate temperature environment.
- » Open the Lightbank's flaps for ventilation as required & as pictured above.
  » Maximum lamp rating for 6020 low heat product is 500 watts.
  » Maximum lamp rating for 6025 high heat product is 750 watts

### DISASSEMBLY AND STORAGE

Disassemble and repack the Octa Lightbank by following the assembly instructions in reverse. Lightbank can be packed into its storage sack with poles in place.