

## WARRANTY INFORMATION

At Chimera, we stand behind our Lightbanks, Speed Rings, and light control accessories with a limited 5-year warranty against manufacturing defects in materials, workmanship, and color stability. If our products are not fully operational out of the box or if they fail to perform within five years from the date of purchase, return for repair or replacement at no charge. Of course, Chimera's warranty cannot cover damage caused by accidents, improper care or use, or the natural deterioration of materials over an extended period of time. This warranty does not apply to expendables, such as light bulbs, and certain OEM products.

## RECOMMENDED BEST PRACTICES FOR CLEANING AND DISINFECTING CHIMERA LIGHTBANKS & TEXTILES



**DO NOT USE HARSH CLEANERS LIKE BLEACH OR OTHER CHLORINATED PRODUCTS ON ANY TEXTILE FROM CHIMERA**

**DO NOT MACHINE WASH OR DRY ANY TEXTILE FROM CHIMERA**

### Fabric Diffusions:

All diffusions should only be cleaned and disinfected by hand. DO NOT MACHINE WASH OR DRY! Use mild soap (something like Dawn) and hand wash thoroughly in warm water. Air dry.

### Lightbanks and Items with Laminated Textiles i.e., Black + Reflection:

Thoroughly wet a clean cloth using a solution of warm water with mild soap. Wipe each surface completely with the soap solution and then repeat with a clean, wet cloth to rinse. Air dry. Alcohol-based aerosol spray with at least 70% alcohol can be effective for both sides of the textiles. Spray evenly to coat all surfaces, use a clean cloth to reach hard to spray areas. Air dry.

### Lighttools Fabric Grids:

Thoroughly wet a clean cloth using a solution of warm water with mild soap. Wipe each surface completely with the soap solution and then repeat with a clean, wet cloth to rinse. Air dry. Alcohol-based aerosol spray with at least 70% alcohol can be effective for both sides of the textiles. Spray evenly to coat all surfaces, use a clean cloth to reach hard to spray areas. Air dry.

### Rings & Frames:

Wipe all surfaces clean with at least 70% alcohol solution and allow to air dry.

## REPAIR

Chimera has an expert in-house repair department. Lightbanks need to be clean, with any added tape removed before sending in for repair. If the Lightbank is received in dirty or in taped condition, the repair may be refused and returned to the sender. Please call in advance to get a Return Authorization Number and repair estimate at +1.888.444.1812 or +1.303.444.8000.



## INSTRUCTIONS FOR CARE AND USE


6155

## OCTA 5 FOR CREAMSOURCE VORTEX 8



## ASSEMBLY

1

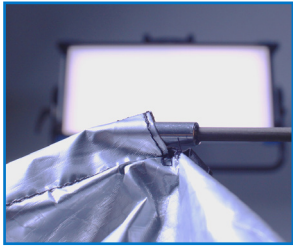

Insert poles into the pole sleeves on the Octa Lightbank. Ensure that the shorter smooth ferrules are inserted into the Lightbank. The longer, notched ferrules should be exposed.

2



Note that each pole sleeve is marked with either an S or an L. Insert the shorter poles into the sleeves marked S and the longer poles – with gold aluminum ends – into the sleeves marked with an L.

3



Insert poles into the pole holes on the frame. Note that the tension on the Lightbank will become greater after inserting each pole. It may feel like you will break a pole, but you will not.

4



With the Lightbank on the fixture, attach the internal baffle to the white hook and loop tabs on the inside of the Lightbank.

5



Attach Chimera Cloth front screen to the hook and loop on the front of the Lightbank.

PRO TIP:  
For the most even front diffusion, use the ( Vortex8) diffusion



Your Octa Lightbank is set up and ready for use!



### WARNING

FAILURE TO FOLLOW THESE SAFETY PRECAUTIONS COULD CREATE A HAZARDOUS CONDITION

- » This product is NOT intended for household use.
- » Do not leave unattended.
- » Use in a moderate temperature environment.
- » **Maximum** lamp rating for this product is **3,200 watts**.

### DISASSEMBLY AND STORAGE

Removing the Lightbank from the frame - follow the steps above in reverse order.

Leave the poles in the Lightbank if desired. It is optional to remove the optional diffusion baffle and the front screen. Crease the short sides of the Lightbank and flatten. Fold the Lightbank in half once, then roll up and place it into the storage sack. Always make sure that your Lightbank is clean and completely dry before storing.