

## WARRANTY INFORMATION

At Chimera, we stand behind our Lightbanks, Speed Rings, and light control accessories with a limited 5-year warranty against manufacturing defects in materials, workmanship, and color stability. If our products are not fully operational out of the box or if they fail to perform within five years from the date of purchase, return for repair or replacement at no charge. Of course, Chimera's warranty cannot cover damage caused by accidents, improper care or use, or the natural deterioration of materials over an extended period of time. This warranty does not apply to expendables, such as light bulbs, and certain OEM products.

## TIPS FOR CARE AND USE

**Cleaning** - Your Chimera Lightbank can be cleaned by hand washing with cold water, a sponge and mild soap. Do not machine wash. To dry, assemble the Lightbank onto a Speed Ring and completely air dry.

**Repair** - Chimera has an expert in-house repair department. Lightbanks need to be clean, with any added tape removed before sending in for repair. If the Lightbank is received in dirty or in taped condition, the repair may be refused and returned to the sender. Please call in advance to get a Return Authorization Number and repair estimate at +1.888.444.1812 or +1.303.444.8000.

## RECOMMENDED BEST PRACTICES FOR CLEANING AND DISINFECTING CHIMERA LIGHTBANKS & TEXTILES



**DO NOT USE HARSH CLEANERS LIKE BLEACH OR OTHER CHLORINATED PRODUCTS ON ANY TEXTILE FROM CHIMERA**

**DO NOT MACHINE WASH OR DRY ANY TEXTILE FROM CHIMERA**

### **Fabric Diffusions:**

All diffusions should only be cleaned and disinfected by hand. **DO NOT MACHINE WASH OR DRY!** Use mild soap (something like Dawn) and hand wash thoroughly in warm water. Air dry.

### **Lightbanks and Items with Laminated Textiles i.e., Black + Reflection:**

Thoroughly wet a clean cloth using a solution of warm water with mild soap. Wipe each surface completely with the soap solution and then repeat with a clean, wet cloth to rinse. Air dry. Alcohol-based aerosol spray with at least 70% alcohol can be effective for both sides of the textiles. Spray evenly to coat all surfaces, use a clean cloth to reach hard to spray areas. Air dry.

### **Lighttools Fabric Grids:**

Thoroughly wet a clean cloth using a solution of warm water with mild soap. Wipe each surface completely with the soap solution and then repeat with a clean, wet cloth to rinse. Air dry. Alcohol-based aerosol spray with at least 70% alcohol can be effective for both sides of the textiles. Spray evenly to coat all surfaces, use a clean cloth to reach hard to spray areas. Air dry.

### **Rings & Frames:**

Wipe all surfaces clean with at least 70% alcohol solution and allow to air dry.



## INSTRUCTIONS FOR CARE AND USE

1 6 9 2  
1 6 9 3  
1 6 9 4


## TUBE PRO



**CHIMERA** LIGHTING • 1067 TELLEEN AVE. ERIE, CO 80516 • (303) 444-8000  
WWW.CHIMERALIGHTING.COM • INFO@CHIMERALIGHTING.COM

## ASSEMBLY

1

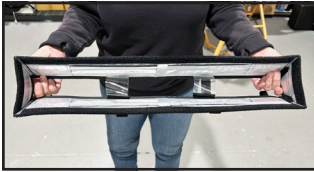


Remove the TubePro POP bank from its storage sack and unfold until it begins to take a rectangular shape. You should hear a POP! when the sides are straightened.

2



Attach clear vinyl straps to the opposite side of the TubePro POP bank with hook and loop.

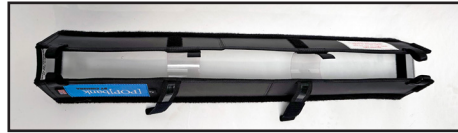

3



Place tube light into the clear vinyl "cradle" as illustrated here.

4



Stretch elastic strap over the back of the tube and secure with hook and loop.

5



Your TubePro is ready for action!



## INSTALLING OPTIONAL ACCESSORIES



**Installing optional front screen:**  
With the Chimera label facing the front of the Lightbank, attach the screen. For easier installation, align the hook strip with the back edge of the wide loop strip on the Lightbank and work your way around the perimeter.



**Installing optional louvers:**  
With wider side facing the front, insert louvers horizontally, placing the narrow edges of each louver against the hook and loop to fix into place.



**Installing optional barndoors:**  
Attach barn doors to outer or inner edge of the TubePro POP bank.



### WARNING

FAILURE TO FOLLOW THESE SAFETY PRECAUTIONS COULD CREATE A HAZARDOUS CONDITION

- » This product is NOT intended for household use.
- » Do not leave unattended.
- » This product is intended for use with LED lights **ONLY**.

### DISASSEMBLY AND STORAGE

Disassemble and repack the TubePro POP BANK by following the assembly instructions in reverse.