

WARRANTY INFORMATION

At Chimera, we stand behind our Lightbanks, Speed Rings, and light control accessories with a limited 5-year warranty against manufacturing defects in materials, workmanship, and color stability. If our products are not fully operational out of the box or if they fail to perform within five years from the date of purchase, return for repair or replacement at no charge. Of course, Chimera's warranty cannot cover damage caused by accidents, improper care or use, or the natural deterioration of materials over an extended period of time. This warranty does not apply to expendables, such as light bulbs, and certain OEM products.

RECOMMENDED BEST PRACTICES FOR CLEANING AND DISINFECTING CHIMERA LIGHTBANKS & TEXTILES



DO NOT USE HARSH CLEANERS LIKE BLEACH OR OTHER CHLORINATED PRODUCTS ON ANY TEXTILE FROM CHIMERA

DO NOT MACHINE WASH OR DRY ANY TEXTILE FROM CHIMERA

Fabric Diffusions:

All diffusions should only be cleaned and disinfected by hand. **DO NOT MACHINE WASH OR DRY!** Use mild soap (something like Dawn) and hand wash thoroughly in warm water. Air dry.

Lightbanks and Items with Laminated Textiles i.e., Black + Reflection:

Thoroughly wet a clean cloth using a solution of warm water with mild soap. Wipe each surface completely with the soap solution and then repeat with a clean, wet cloth to rinse. Air dry. Alcohol-based aerosol spray with at least 70% alcohol can be effective for both sides of the textiles. Spray evenly to coat all surfaces, use a clean cloth to reach hard to spray areas. Air dry.

Lighttools Fabric Grids:

Thoroughly wet a clean cloth using a solution of warm water with mild soap. Wipe each surface completely with the soap solution and then repeat with a clean, wet cloth to rinse. Air dry. Alcohol-based aerosol spray with at least 70% alcohol can be effective for both sides of the textiles. Spray evenly to coat all surfaces, use a clean cloth to reach hard to spray areas. Air dry.

Rings & Frames:

Wipe all surfaces clean with at least 70% alcohol solution and allow to air dry.

REPAIR

Chimera has an expert in-house repair department. Lightbanks need to be clean, with any added tape removed before sending in for repair. If the Lightbank is received in dirty or in taped condition, the repair may be refused and returned to the sender. Please call in advance to get a Return Authorization Number and repair estimate at +1.888.444.1812 or +1.303.444.8000.



INSTRUCTIONS FOR CARE AND USE

1 6 4 5

POP BANK FOR ARRI SKYPANEL X23



ASSEMBLY

1



 
Remove the POP Bank from its storage sack and unfold until it takes a rectangular shape. You should hear a POP! when the sides are straightened. Pull the POP Bank over the front face of the ARRI SkyPanel X23, taking care to observe the 'This Side Up' label is placed on the upper/top side of the POP Bank.

2



Use the safety loops to pull the POP Bank securely onto the fixture. The POP Bank should sit just over the lip of the fixture. These safety loops can be used to attach safety cables.

3

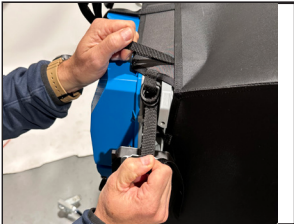

Run the straps through the D-rings at the top two corners. Place the elastic straps over the bottom two corners.

4



 
Run the attached **LONGER** hook-and-loop straps through the D-ring on the bottom of the POP Bank.

5




Tighten until the straps sit flat against the rear of the fixture.

6

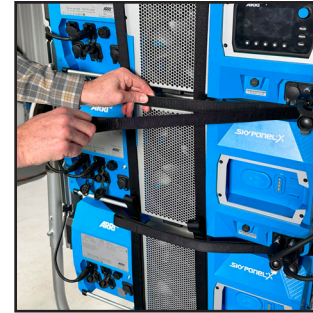

Repeat with the attached **SHORTER** hook-and-loop straps through the D-ring of the POP Bank. Tighten until they sit flat against the rear of the fixture.

 7

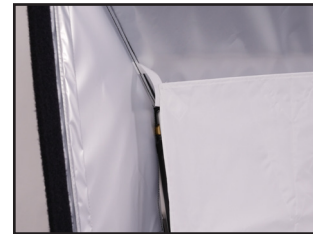

OPTIONAL: Attach inner baffle.

8



Attach the front diffusion screen and your POP Bank is ready for use!

Want more control?

Use the 3540ez 40 degree Soft Egg Crate for best fit!



This Lightbank has been designed to be used with the ARRI X23 fixture and will withstand any temperature associated with normal use.

DISASSEMBLY AND STORAGE

Disassemble and repack the lightbank for the POP BANK by following the assembly instructions in reverse.